


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. REFER TO THE AWP HORIZONTAL INSTALL GUIDE FOR FULL INSTRUCTIONS AND DETAILS ABOUT USE OF AWP AS SOFFIT.
3. FACE FASTEN PANEL CENTERS AT EACH FRAMING MEMBER WITH FULL-HEADED AND FULL-THREADED CORROSION RESISTANT SCREWS. PANELS REDUCED TO 10" OR LESS DO NOT REQUIRE CENTER-LINE FACE FASTENING. UTILIZE 10MM SPACERS AT ALL FACE FASTENING LOCATIONS.
4. STARTER TRACK FA700 MAY BE USED AT THE WALL/SOFFIT INTERSECTION. PANEL FACTORY EDGES EXTEND $\frac{3}{4}$ " BEYOND TRACK.
5. PANEL JOINTS (17-7/8" (455MM) EDGES (RUNNING PERPENDICULAR TO WALL)) MUST UTILIZE H-MOLD TRIM CHANNELS.
6. POSITION CLIPS TO SUPPORT PANEL EDGES/CORNERS AT JOINTS. KEEP NO FURTHER THAN 1" FROM JOINT EDGES.

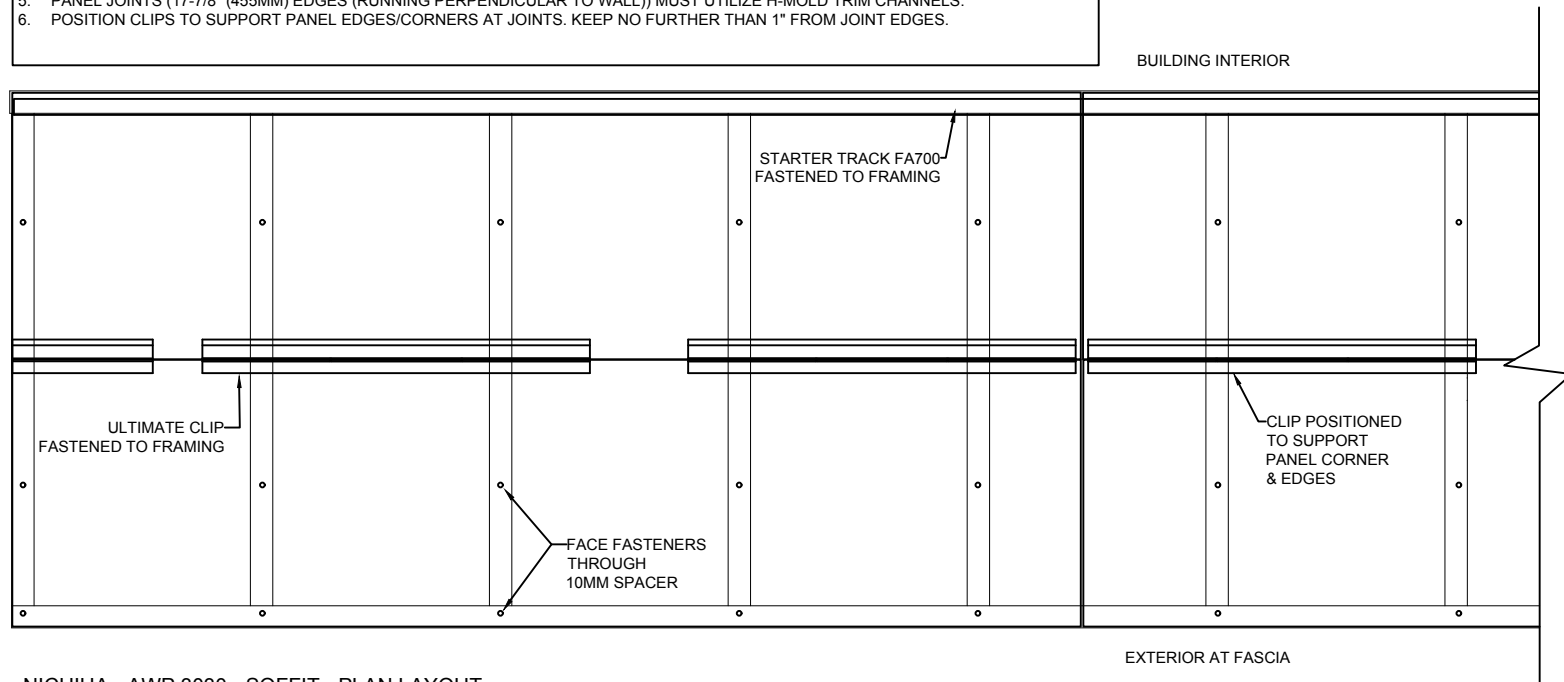

NICHHA - AWP 3030 - SOFFIT - PLAN LAYOUT