


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. NICHHA AWP-1818-3030 REPRESENTED HERE IS 5/8" PRODUCT, ADJUST ACCORDINGLY FOR OTHER NICHHA PRODUCT THICKNESSES.
3. ADD AWP FIRST, TERMINATING TO SINGLE FLANGE SEALANT BACKER AT INSIDE CORNER.
4. SHEATHING REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB (REQUIRED FOR KURASTONE INSTALLATION). IF USING OTHER THICKNESSES ADJUST ACCORDINGLY.
5. A CODE APPROVED WRB IS REQUIRED. ALSO ADD A LAYER OF 15 LB BLACK FELT OVER LIGHT-COLORED WRB BEHIND KURASTONE.
6. COAT ANY CUT EDGES OF AWP OR KURASTONE WITH KILZ PREMIUM/MAX OR COLOR-MATCHED 100% ACRYLIC LATEX EXTERIOR PAINT.

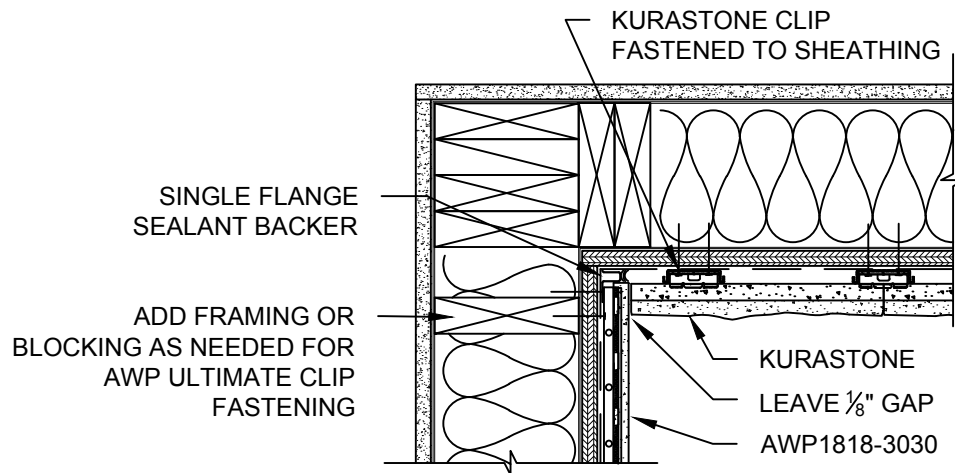

NICHHA - HORIZONTAL AWP - KURASTONE - INSIDE CORNER DETAIL

SCALE: 1 1/2" = 1'-0"