


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. NICHHA PANEL REPRESENTED HERE IS 5/8" NICHHA PRODUCT, ADJUST ACCORDINGLY FOR OTHER NICHHA PRODUCT THICKNESSES.
3. ADD STUD, BLOCKING OR STUD EXTENDER AS REQUIRED FOR CLIP ATTACHMENT.
4. SHEATHING REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB. IF USING OTHER THICKNESSES ADJUST ACCORDINGLY.
5. FIELD INSTALLATION DETAIL FOR VERTICAL JOINTS BETWEEN MODULAR UNITS INCLUSIVE OF FACTORY-INSTALLED NICHHA AWP.
6. ALWAYS REMOVE AWP SHIPLAP EDGES WHERE PANELS BUTT TO FLANGED SEALANT BACKERS.
7. REVIEW THE PREFAB/OFFSITE SUPPLEMENTAL INSTALL GUIDE FOR ADDITIONAL DETAILS AND SEQUENCING.
8. NICHHA AWP VERTICAL/TERMINAL EDGES ARE CAPPED WITH SINGLE FLANGE SEALANT BACKERS. ALTERNATIVELY, J-MOLD TRIM MAY BE USED BUT ALLOW FOR A  $\frac{3}{8}$ " GAP WHERE PANELS JOINT BETWEEN PREFAB UNITS.

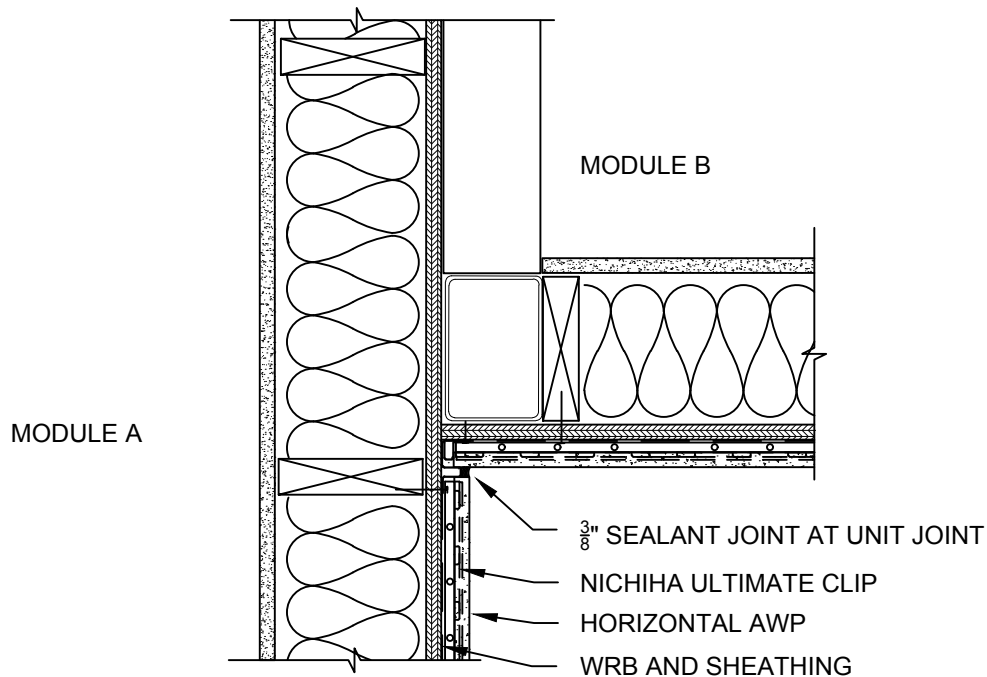

NICHHA HORIZONTAL AWP - MODULAR UNIT JOINT - INSIDE CORNER

SCALE: 1 1/2" = 1'-0"