


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHIIHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. NICHIIHA PANEL REPRESENTED HERE IS 5/8" NICHIIHA PRODUCT, ADJUST ACCORDINGLY FOR OTHER NICHIIHA PRODUCT THICKNESSES.
3. SHEATHING REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB. IF USING OTHER THICKNESSES ADJUST ACCORDINGLY. EXTERIOR GYPSUM SHEATHING IS ALSO AN OPTION.
4. FIELD INSTALLATION DETAIL FOR VERTICAL JOINTS BETWEEN MODULAR UNITS INCLUSIVE OF FACTORY-INSTALLED NICHIIHA AWP.
5. ALWAYS REMOVE AWP SHIPLAP EDGES WHERE PANELS BUTT TO FLANGED SEALANT BACKERS.
6. REVIEW THE PREFAB/OFFSITE SUPPLEMENTAL INSTALL GUIDE FOR ADDITIONAL DETAILS AND SEQUENCING.

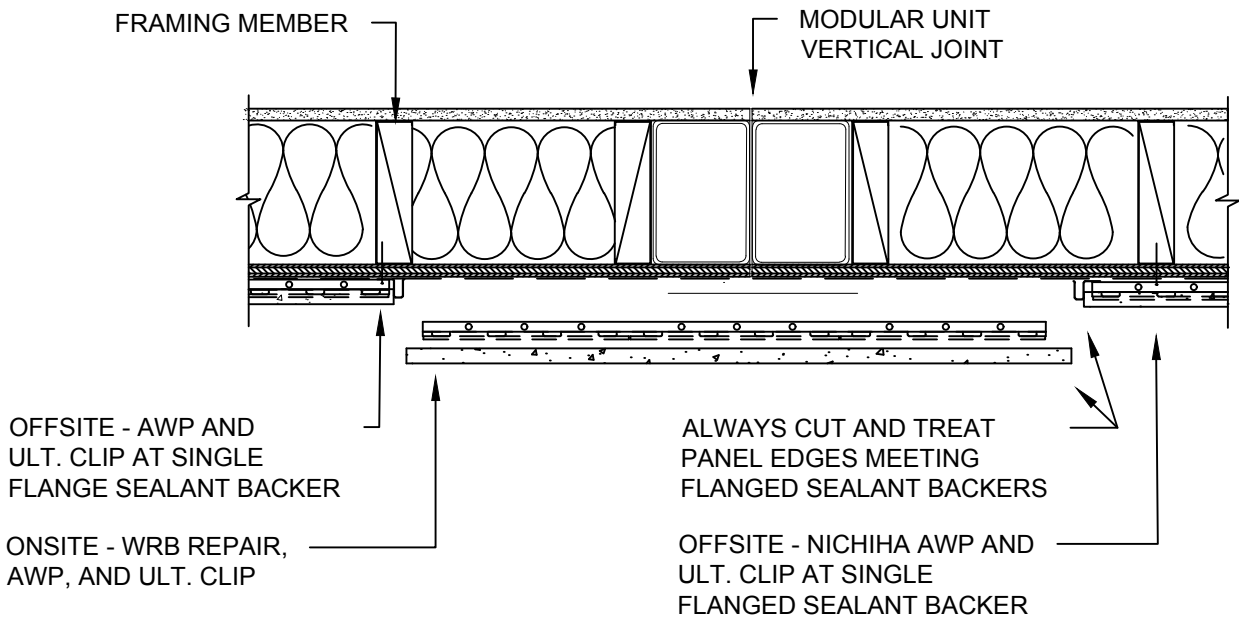

NICHIIHA HORIZONTAL AWP - PREFAB VERTICAL JOINT - ONSITE COMPLETION - AWP-1818 STAGGERED LAYOUT

SCALE: 1 1/2" = 1'-0"