


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. NICHHA PANEL REPRESENTED HERE IS 5/8" NICHHA PRODUCT, ADJUST ACCORDINGLY FOR OTHER NICHHA PRODUCT THICKNESSES.
3. INCLUDE NICHHA 10MM SPACER BETWEEN PANELS AND SHEATHING AT SIGNAGE/ATTACHMENT FASTENING POINTS TO PREVENT PANEL DEFLECTION.
4. ADD SHIMS (SUCH AS NICHHA SPACER OR HORSESHOE SHIM) BETWEEN ATTACHMENTS AND AWP TO PREVENT MOISTURE TRAPPING.

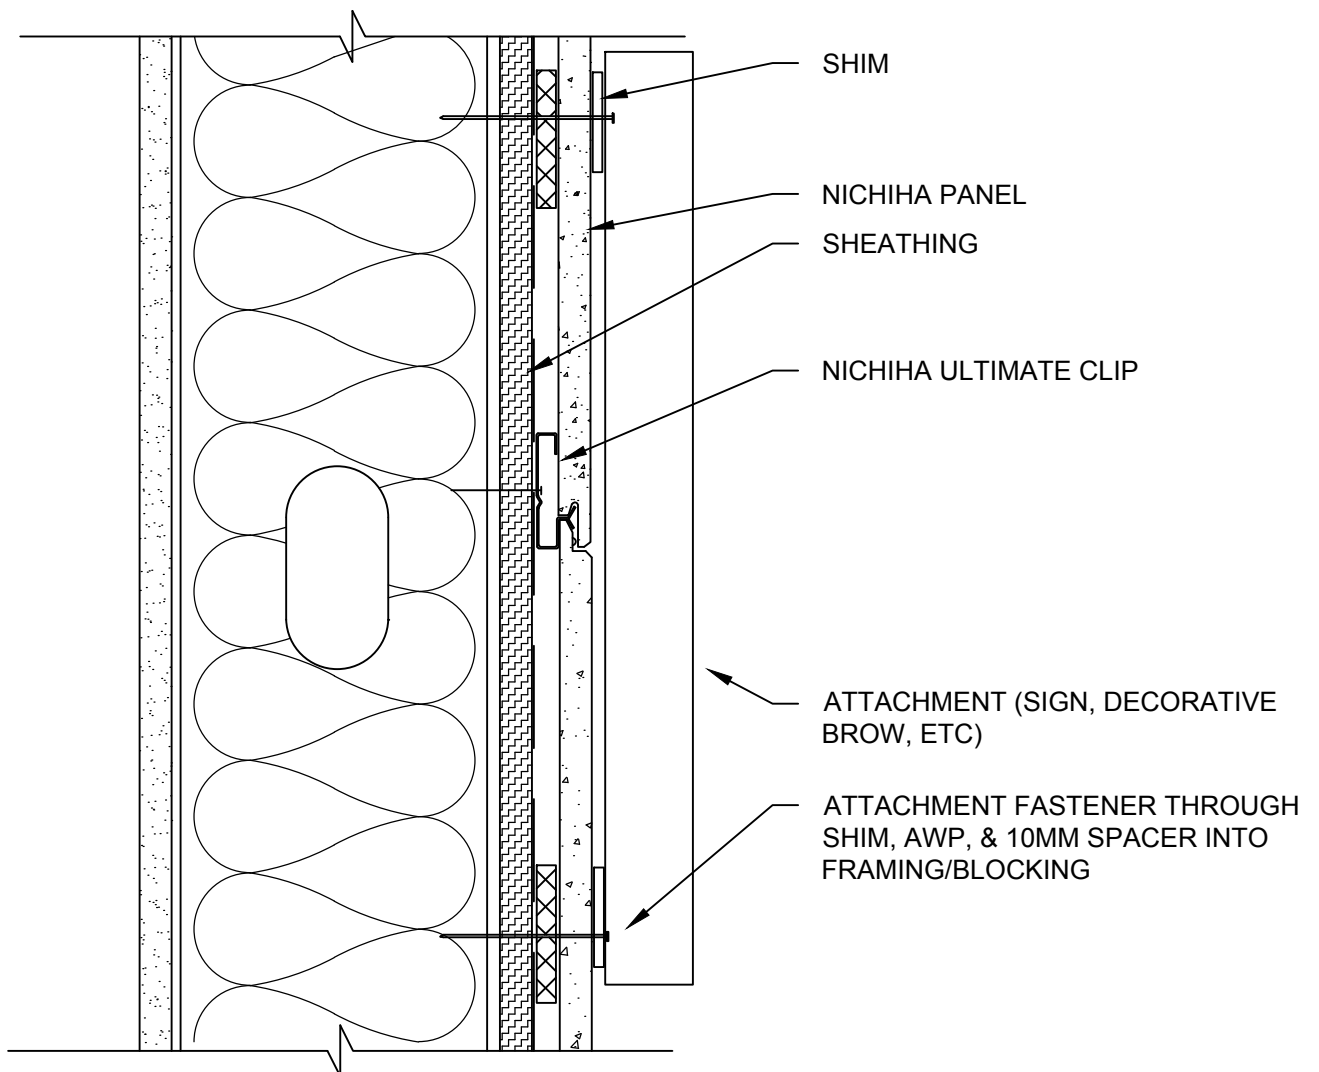

NICHHA - AWP - HORIZONTAL - ATTACHMENT/SIGN ANCHOR DETAIL

SCALE: 3" = 1'-0"