


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. NICHHA PANEL REPRESENTED HERE IS 5/8" NICHHA PRODUCT, ADJUST ACCORDINGLY FOR OTHER NICHHA PRODUCT THICKNESSES.
3. ADD STUD, BLOCKING OR STUD EXTENDER AS REQUIRED FOR FURRING AND CLIP ATTACHMENT/FASTENING.
4. TRIM MAY BE FASTENED TO WOOD SHEATHING OR FRAMING/BLOCKING/FURRING.
5. SHEATHING REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB. IF USING OTHER THICKNESSES ADJUST ACCORDINGLY. A CODE APPROVED WRB IS REQUIRED. PLACE PER LOCAL CODE.
6. REFER TO THE CONTINUOUS INSULATION SECTION OF THE NICHHA INSTALLATION GUIDE - HORIZONTAL AWP. CONSULT A STRUCTURAL ENGINEER TO DESIGN THE FURRING SYSTEM TO MANAGE LOADING REQUIREMENTS.

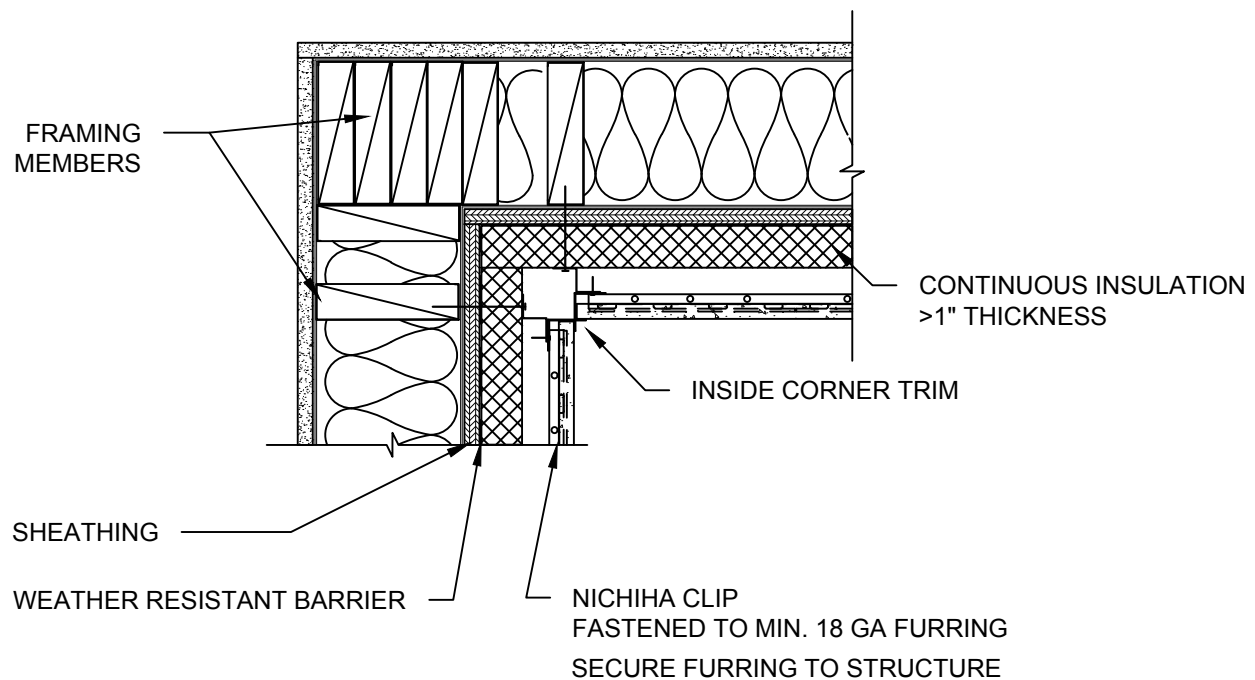

**NICHHA - HORIZONTAL AWP - CONTINUOUS INSULATION WITH FURRING
- INSIDE CORNER METAL TRIM**

SCALE: 1 1/2" = 1'-0"