


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. NICHHA PANEL REPRESENTED HERE IS 5/8" NICHHA PRODUCT, ADJUST ACCORDINGLY FOR OTHER NICHHA PRODUCT THICKNESSES.
3. SHEATHING REPRESENTED HERE IS 5/8" EXTERIOR GYP. IF USING OTHER THICKNESSES ADJUST ACCORDINGLY. A CODE APPROVED WRB IS REQUIRED. PLACE PER LOCAL CODE.
4. REFER TO THE CONTINUOUS INSULATION SECTION IN THE NICHHA INSTALLATION GUIDE - HORIZONTAL AWP. CONSULT A STRUCTURAL ENGINEER TO DESIGN THE FURRING SYSTEM TO MANAGE LOADING REQUIREMENTS.
5. MITER CUT PANEL EDGES TO ENABLE FULL INSERTION INTO CORNER KEY TRIM CHANNELS.

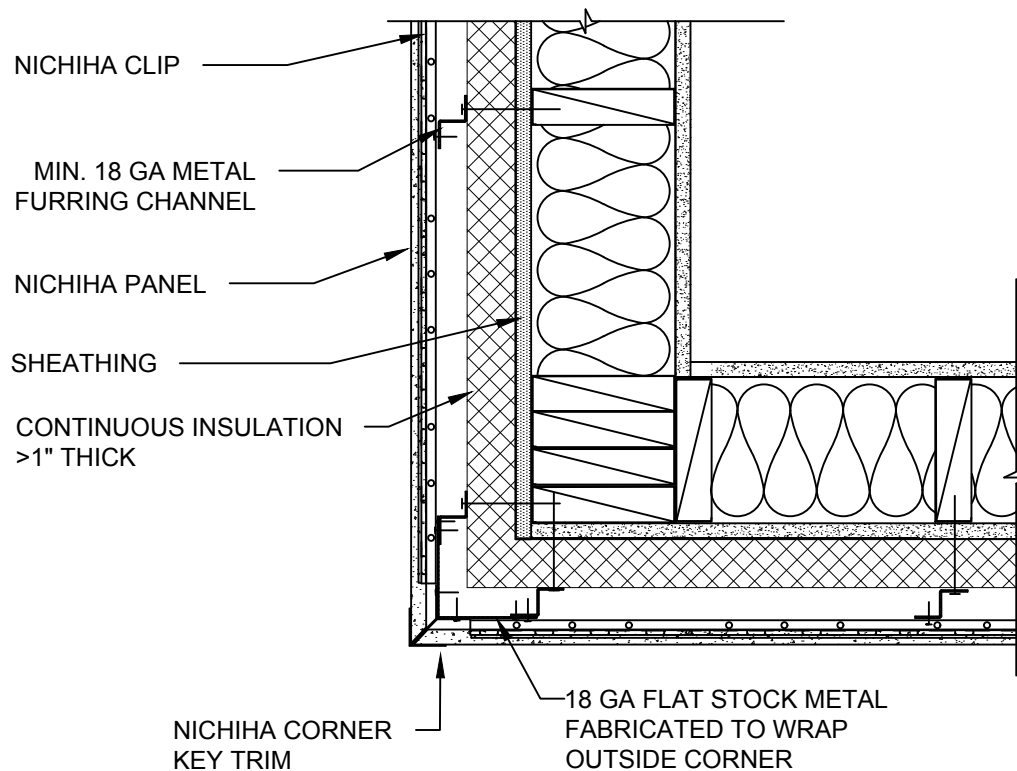

NICHHA - HORIZONTAL AWP - CONTINUOUS INSULATION WITH FURRING -
OUTSIDE CORNER - CORNER KEY TRIM

SCALE: 1 1/2" = 1'-0"