


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. SHEATHING REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB. IF USING OTHER THICKNESSES ADJUST ACCORDINGLY. NICHHA REQUIRES A WEATHER RESISTANT BARRIER. PLACE PER LOCAL CODE.
3. NICHHA PANEL REPRESENTED HERE IS 5/8" NICHHA PRODUCT, ADJUST ACCORDINGLY FOR OTHER NICHHA PRODUCT THICKNESSES.
4. REFER TO THE CONTINUOUS INSULATION SECTION OF THE NICHHA INSTALLATION GUIDE - HORIZONTAL AWP. CONSULT A STRUCTURAL ENGINEER TO DESIGN THE FURRING SYSTEM TO MANAGE LOADING REQUIREMENTS.

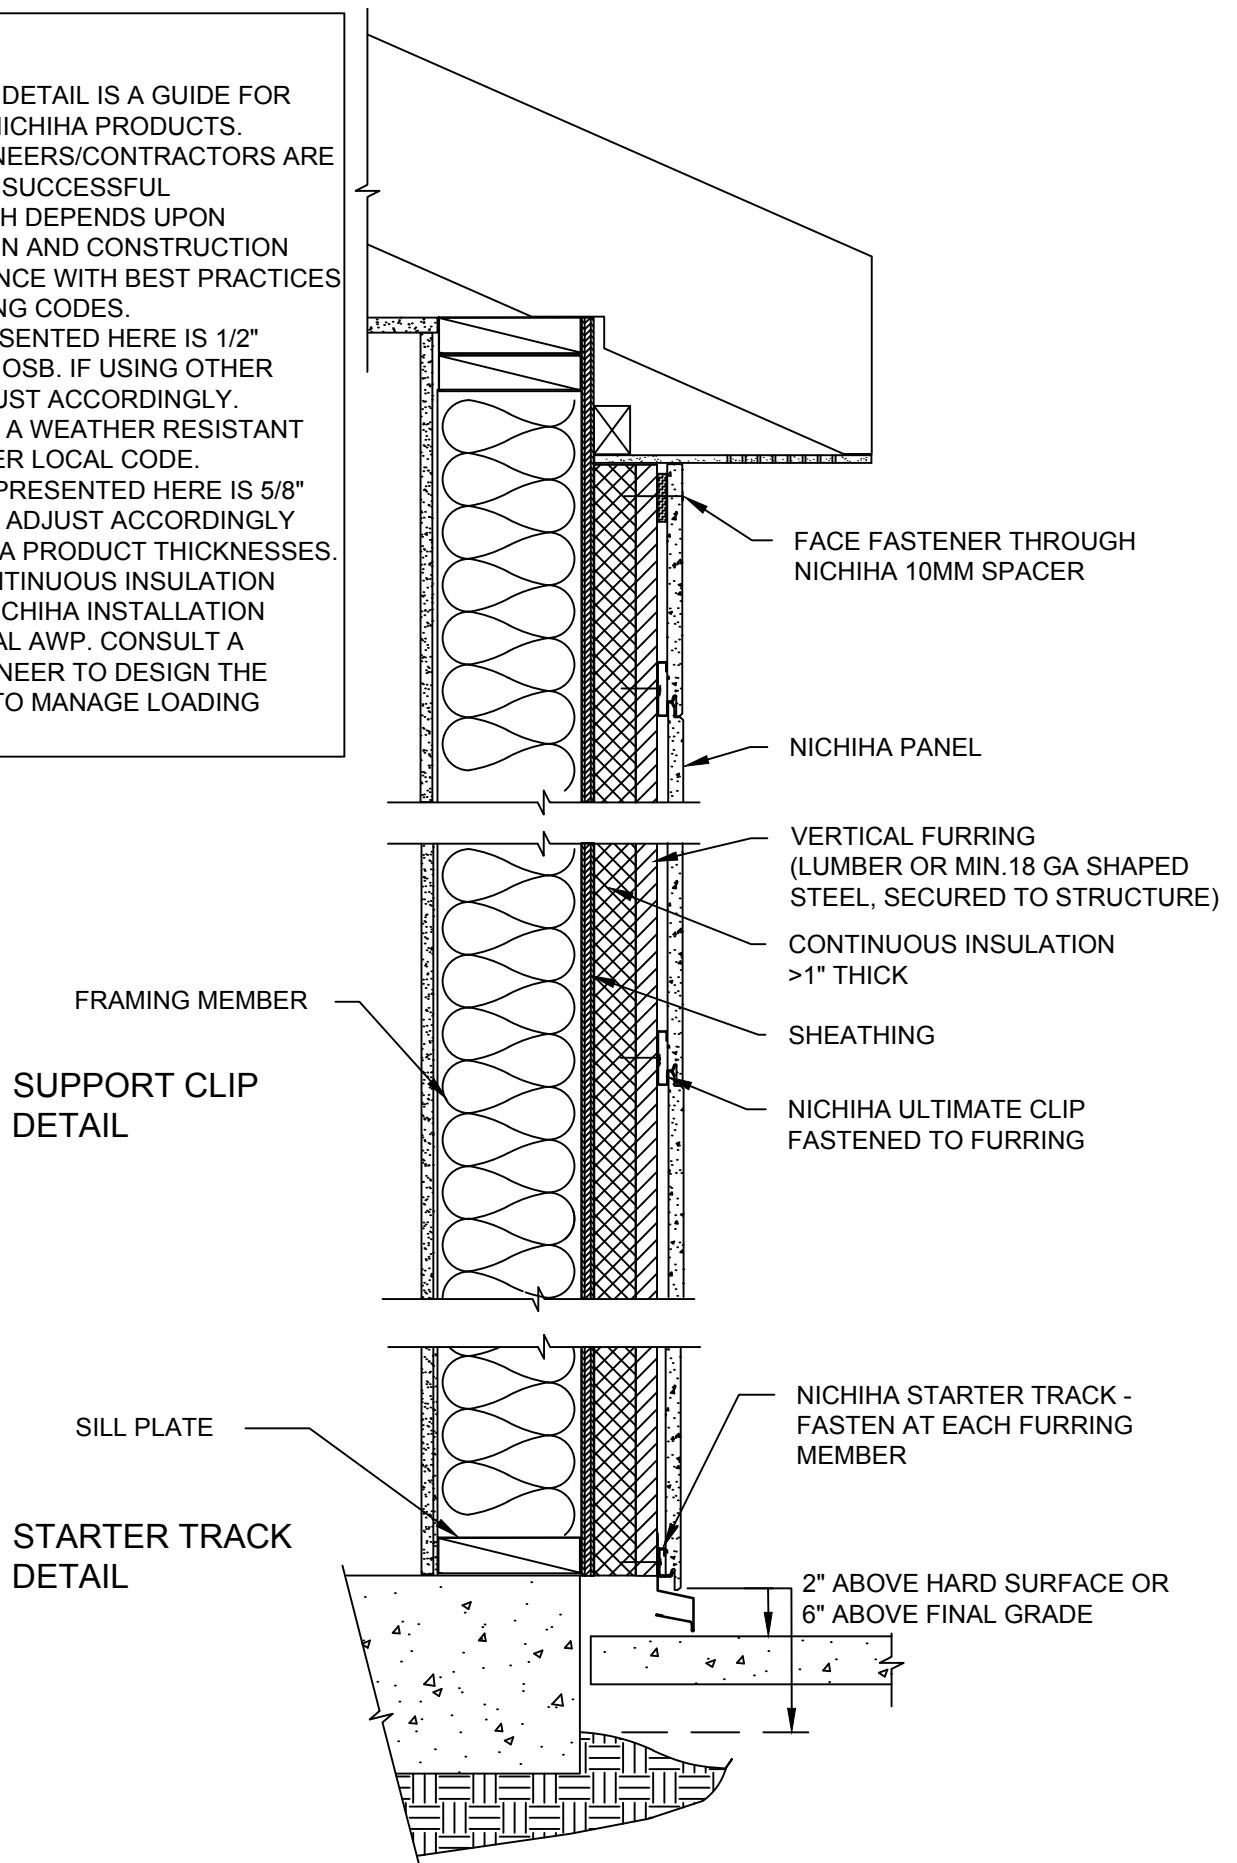

NICHHA - HORIZONTAL AWP - CONTINUOUS INSULATION WITH FURRING - TYPICAL WALL SECTION - SOFFIT