


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHIIA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. NICHIIA PANEL REPRESENTED HERE IS 5/8" NICHIIA PRODUCT, ADJUST ACCORDINGLY FOR OTHER NICHIIA PRODUCT THICKNESSES.
3. SHEATHING REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB. IF USING OTHER THICKNESSES ADJUST ACCORDINGLY. NICHIIA REQUIRES A WEATHER/WATER RESISTANT BARRIER. PLACE PER LOCAL CODE.
5. REFER TO THE CONTINUOUS INSULATION SECTION OF THE NICHIIA INSTALLATION GUIDE - HORIZONTAL AWP. CONSULT A STRUCTURAL ENGINEER TO DESIGN THE FURRING SYSTEM TO MANAGE LOADING REQUIREMENTS.
6. FOLLOW WRB AND WINDOW MANUFACTURERS' INSTRUCTIONS WITH RESPECT TO MOISTURE MANAGEMENT BEST PRACTICES.

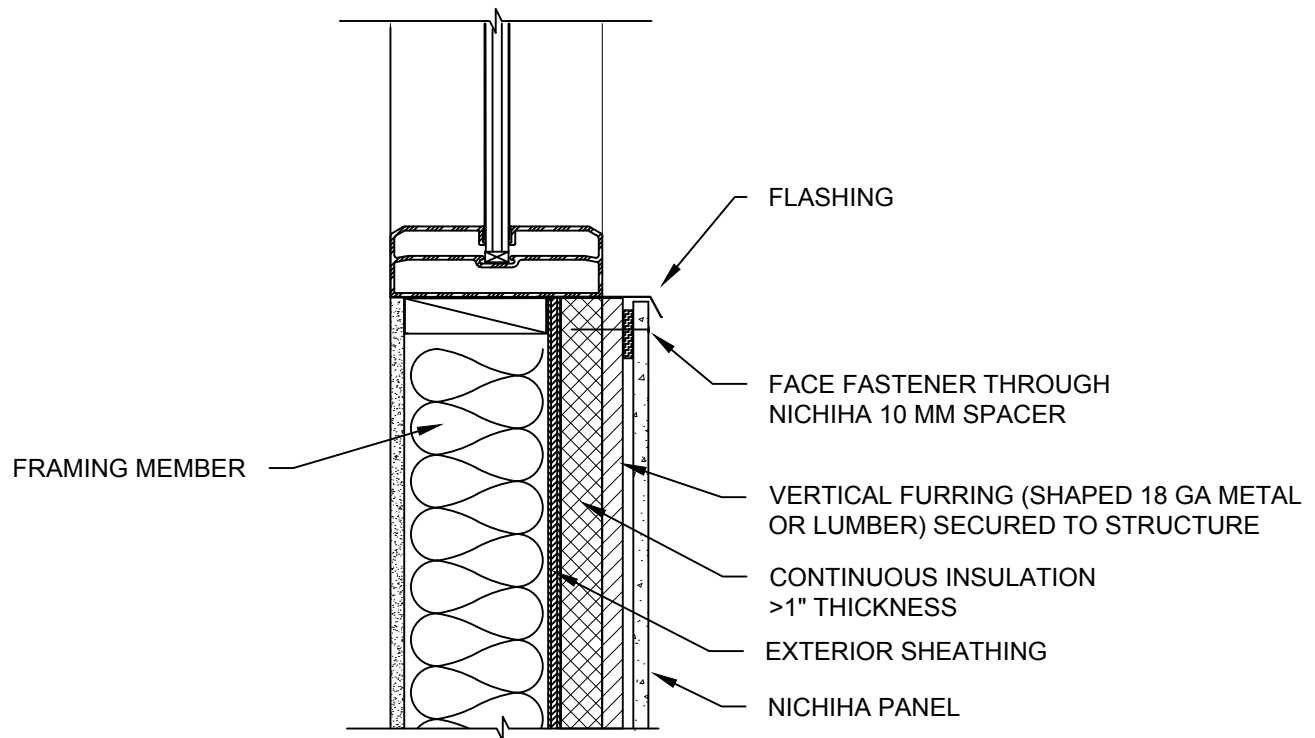

NICHIIA HORIZONTAL AWP - CONTINUOUS INSULATION WITH FURRING -  
WINDOW SILL

SCALE: 1 1/2" = 1'-0"