


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. NICHHA PANEL REPRESENTED HERE IS 5/8" NICHHA PRODUCT, ADJUST ACCORDINGLY FOR OTHER NICHHA PRODUCT THICKNESSES.
3. SHEATHING (REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB (IF USING OTHER THICKNESSES ADJUST ACCORDINGLY).
4. FASTENERS MUST BE MIN. 3/8" FROM PANEL EDGES AND 2" FROM CORNERS.
5. ALL PANEL EDGES MUST BE ATTACHED TO VERTICAL AND HORIZONTAL FRAMING MEMBERS AT 6" OC. FASTEN AT INTERMEDIATE STUDS VERTICALLY AT 12" OC.
6. CUT ENDS OF BOARD MUST BE SEALED WITH PRIMER, PAINT OR SEALANT.

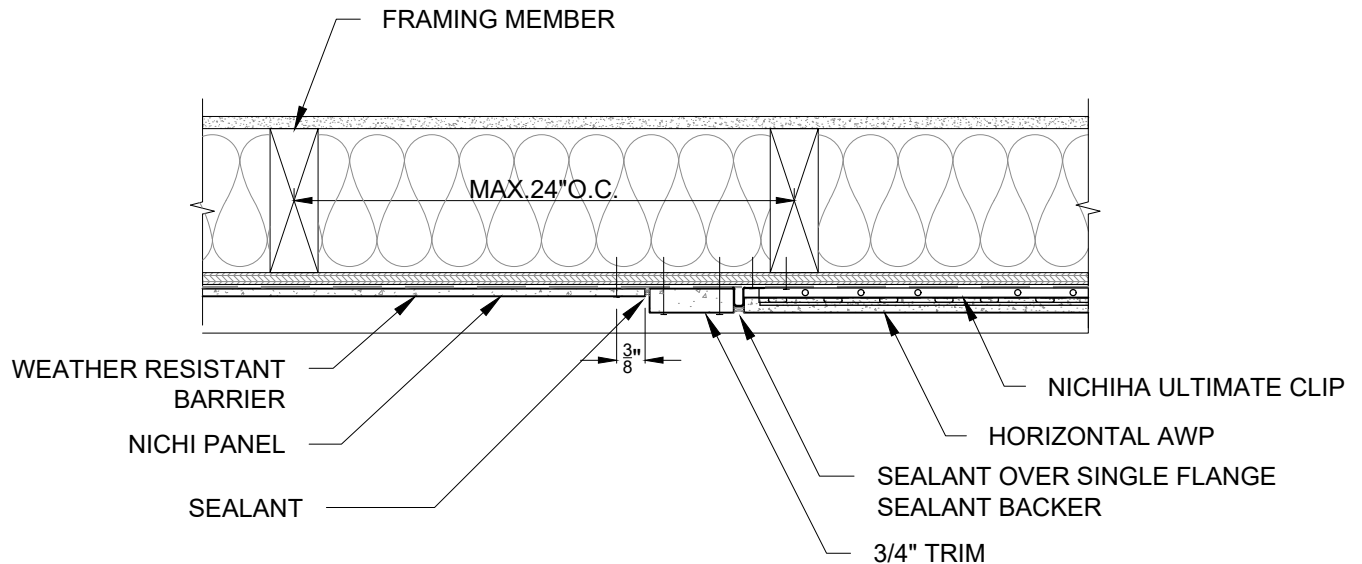

WOOD STANDARD NICHIPANEL VERTICAL JOINT DETAIL WITH 3/4" TRIM
TRANSITION TO HORIZONTAL AWP

SCALE: 1 1/2" = 1'-0"