


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. SHEATHING REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB (IF USING OTHER THICKNESSES ADJUST ACCORDINGLY). WOOD SHEATHING IS REQUIRED WITH SIERRA AND SAVANNAH BOARDS.
3. BLIND FASTENERS MUST BE MIN. 1" FROM END OF BOARD FOR BUTT JOINTS AND CORNERS AND 1" FROM TOP EDGE. #8 SCREWS ARE REQUIRED AT BOARD ENDS.
4. CUT EDGES OF BOARD MUST BE SEALED WITH PRIMER OR PAINT.
5. STARTER STRIP TO BE A CUT PIECE OF SHAKE/SMOOTH BOARD, FS1010 10MM SPACER, OR 1/2" FIBER CEMENT, PVC OR PRESSURE TREATED LUMBER ONLY.

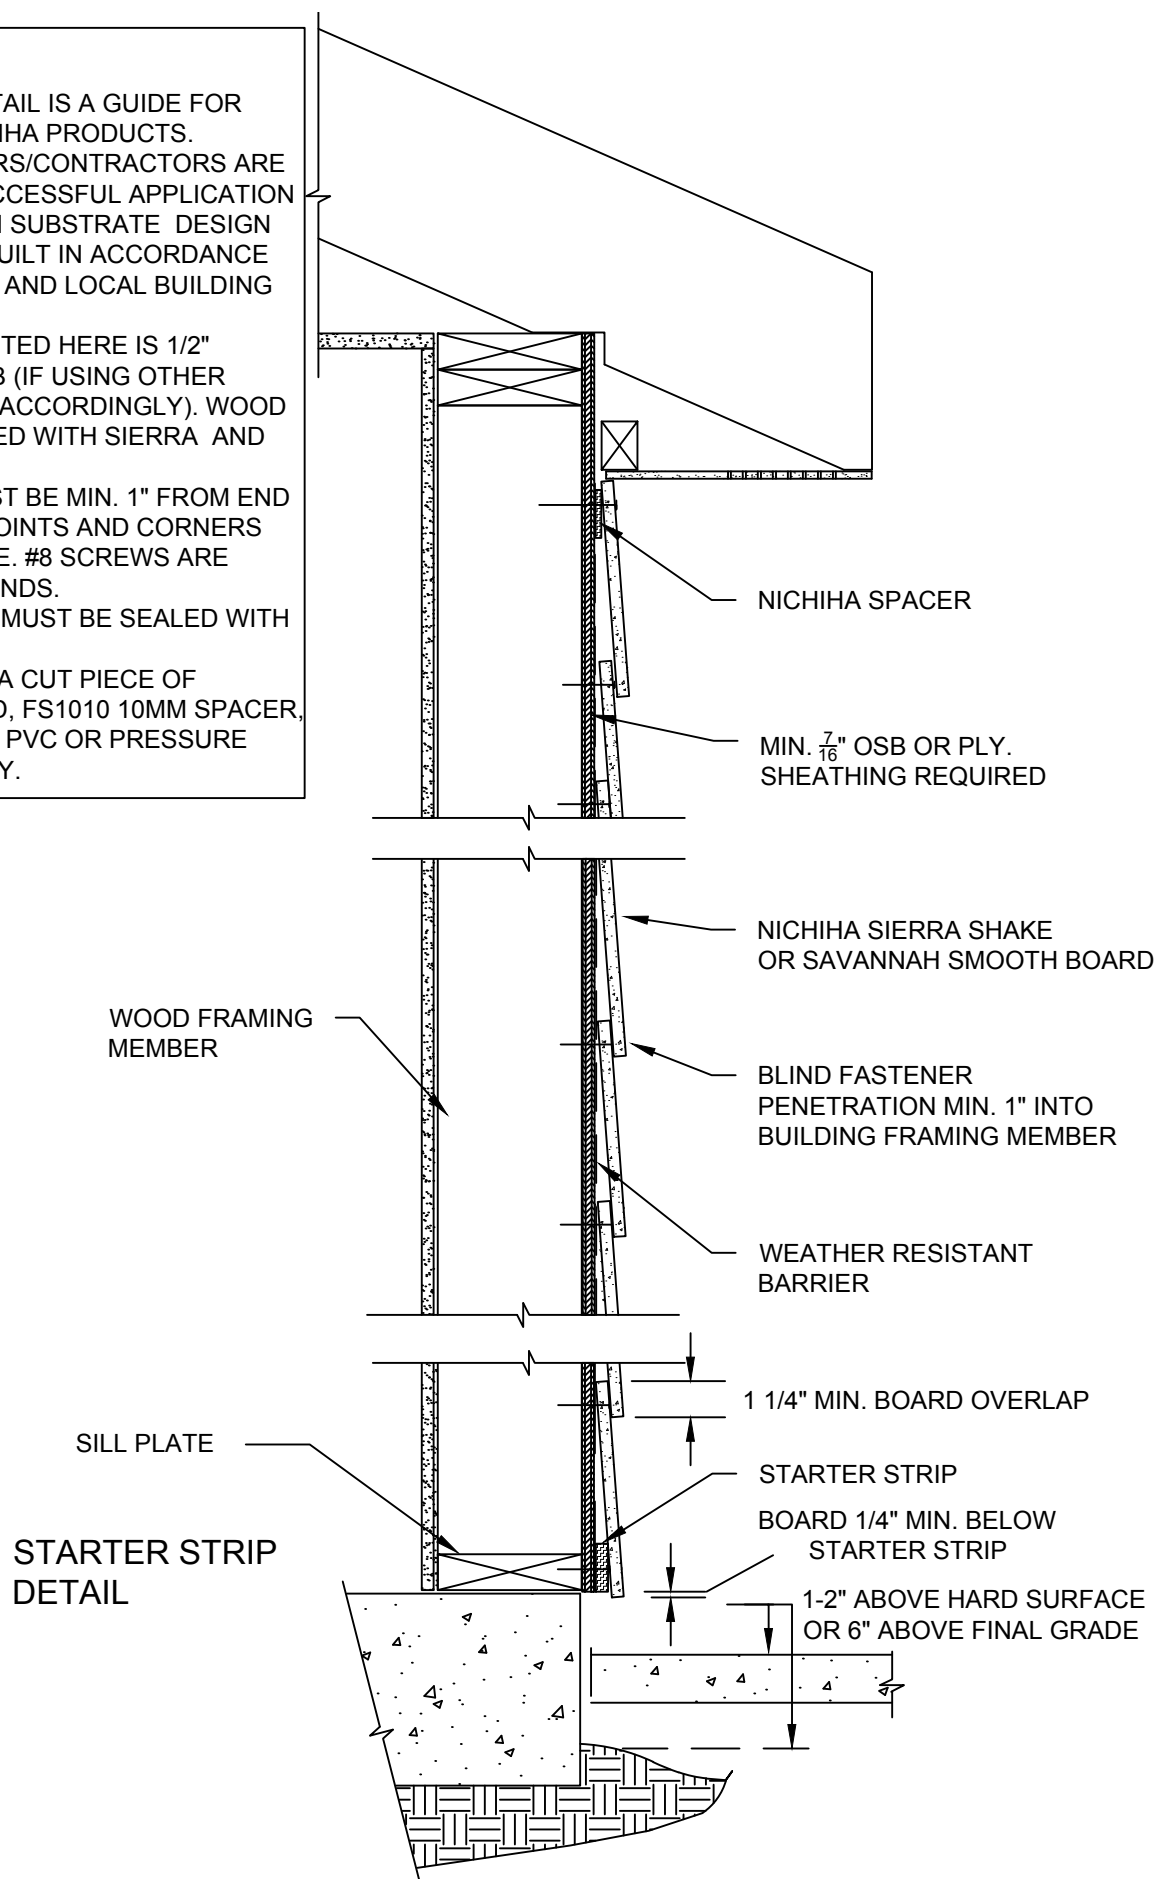

NICHHA - WOOD STUD - SIERRA SHAKE/SAVANNAH SMOOTH - TYPICAL WALL SECTION

SCALE: $1\frac{1}{2}" = 1'-0"$