


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHIIHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. WOOD STRUCTURAL SHEATHING IS REQUIRED FOR KURASTONE INSTALLATION. SHEATHING REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB (MIN.). IF USING OTHER THICKNESSES ADJUST ACCORDINGLY.
3. A CODE-APPROVED WRB IS REQUIRED. A DARK COLOR IS RECOMMENDED OR PAIR WITH 15 LB BLACK FELT. PROVIDE FOR WATERPROOFING BEST PRACTICES AT OUTSIDE CORNERS.
4. FASTEN EACH KURASTONE CLIP TO WOOD SHEATHING WITH TWO (2) MIN. $\frac{3}{4}$ " LONG X #8 OR GREATER WOOD SCREWS. AWP ULTIMATE CLIPS MUST BE FASTENED AT EACH STUD WITH MIN. 1" SCREW PENETRATION.
5. CONTACT NICHIIHA TECHNICAL REGARDING CONTINUOUS INSULATION OPTIONS.

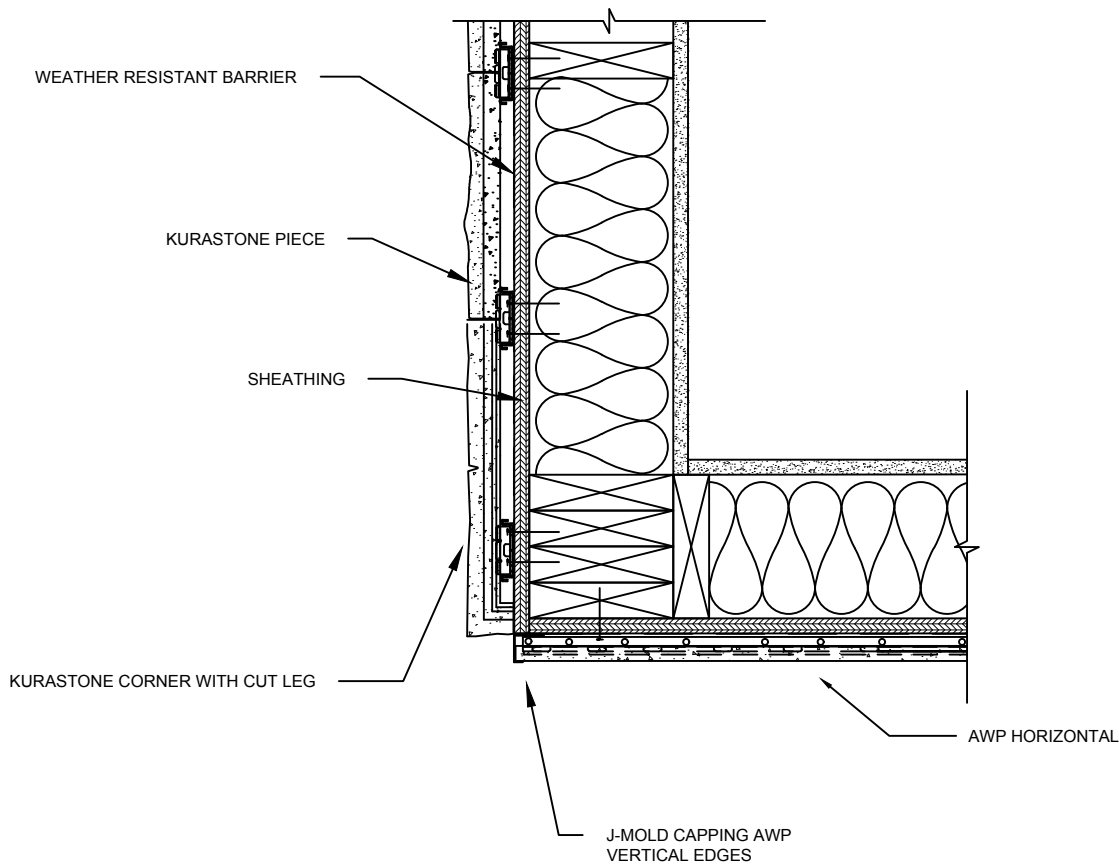

NICHIHA - KURASTONE - HORIZONTAL AWP - STUD WALL - OUTSIDE CORNER TRANSITION DETAIL

SCALE: 1 1/2" = 1'-0"