


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHIIHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. MIN. $\frac{7}{16}$ " OSB OR $\frac{1}{2}$ " PLYWOOD SHEATHING IS REQUIRED FOR KURASTONE AND AWP VERTICAL INSTALLATIONS. FASTEN STARTER TRACKS TO STUDS AND PER RESPECTIVE INSTALL GUIDES.
3. DISTANCE BETWEEN EDGE OF PANEL AND KURASTONE SILL CHISELED MUST PROVIDE A MINIMUM OF 1/2" CLEARANCE.
4. METAL FRAMING MEMBERS MUST BE A MINIMUM OF 18 GAUGE.
5. FASTEN EACH KURASTONE CLIP WITH TWO (2) MIN. $\frac{3}{4}$ " LONG X #8 OR GREATER WOOD SCREWS.
6. CONTACT NICHIIHA TECHNICAL REGARDING CONTINUOUS INSULATION OPTIONS.
7. ADD SILL CHISELED AT DESIRED HEIGHT FIRST PRIOR TO KURASTONE AND AWP INSTALLATION.

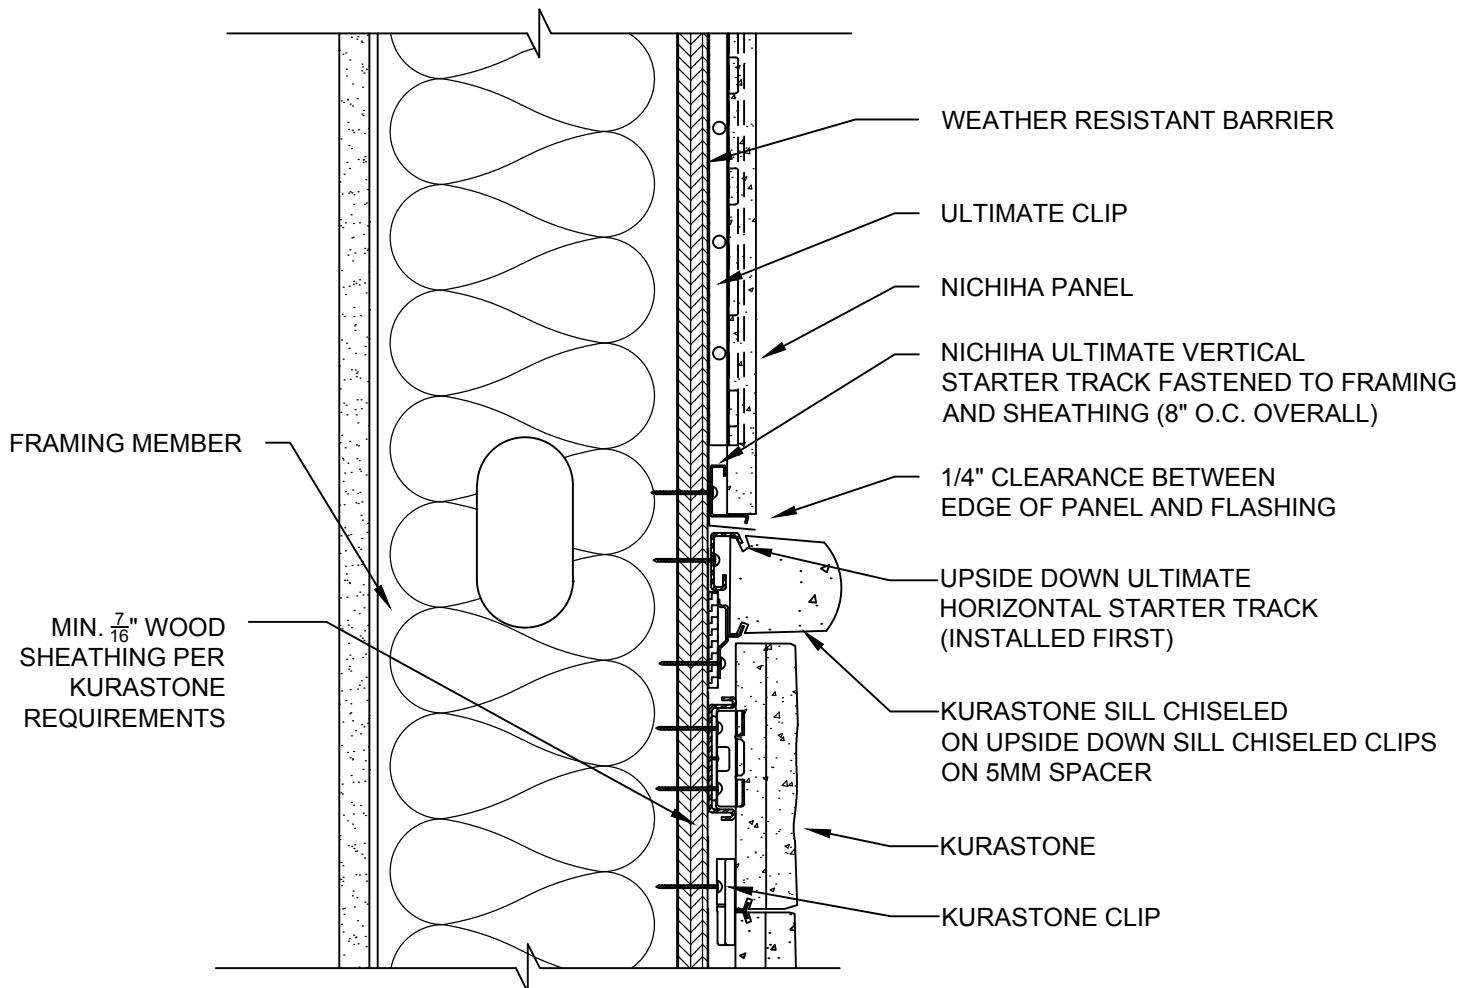

NICHIIHA - STUD WALL - KURASTONE - SILL CHISELED - VERTICAL AWP -
TRANSITION DETAIL

SCALE: 3" = 1'-0"