


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. ONLY 3030MM AWP MAY BE USED IN VERTICAL APPLICATIONS.
3. SHEATHING REPRESENTED HERE IS 5/8" EXTERIOR PLYWOOD.
4. DISTANCE BETWEEN EDGES OF PANELS AT FLASHING JOINTS MUST BE A MINIMUM OF 1/2" .
5. MODULAR UNIT HORIZONTAL JOINT - FIELD INSTALLATION DETAIL - ONSITE INFILL VERTICAL (PARTIAL) PANEL WITH VERTICAL (PANEL) STARTER TRACK SHOWN. HORIZONTAL AWP BAND BOARD OR TRIM ARE ALSO OPTIONS FOR THE INFILL AREA.

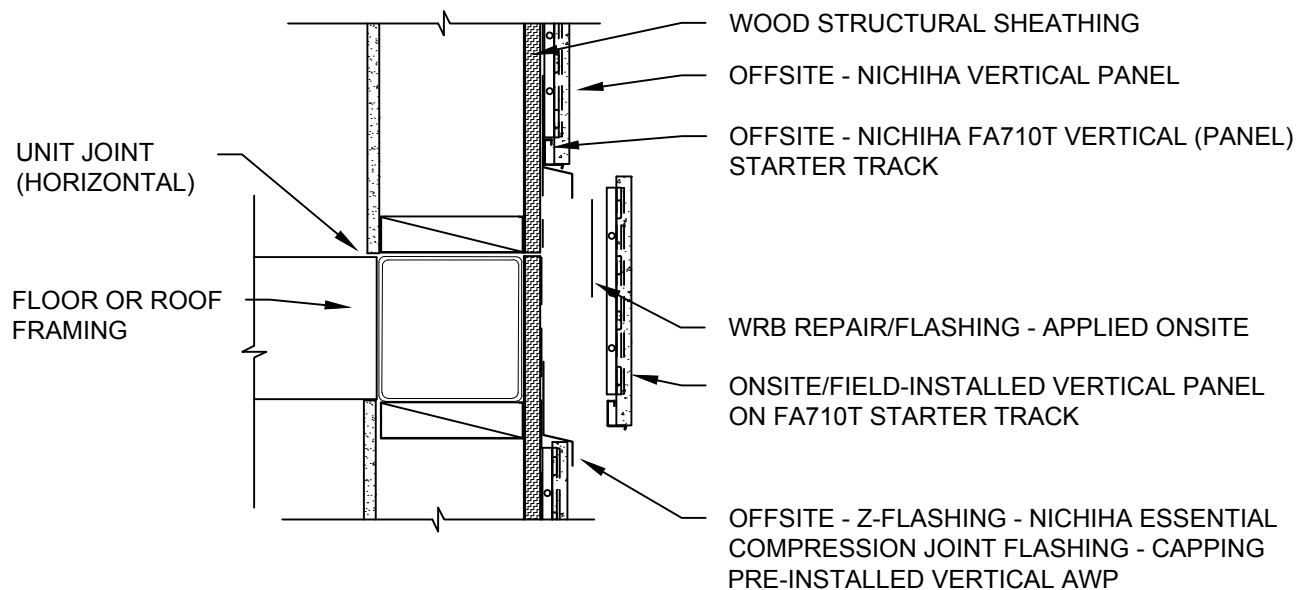

NICHHA - VERTICAL AWP - MODULAR HORIZONTAL JOINT - PARTIAL ONSITE COMPLETION

SCALE: 1 1/2" = 1'-0"