


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHIIHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. ONLY USE NICHIIHA 3030 MM AWP FOR VERTICAL INSTALLATIONS.
3. FURRING GRID DEPICTED INCLUDES TWO LAYERS: (1) VERTICAL FURRING ALIGNED WITH WALL FRAMING AND (2) HORIZONTAL HAT CHANNELS (MIN. 18 GA) FOR VERTICAL AWP SYSTEM INSTALLATION. REFER TO "CONTINUOUS INSULATION" IN THE VERTICAL AWP INSTALL GUIDE FOR MORE INFORMATION AND ALTERNATIVE ASSEMBLY OPTIONS.
4. FIELD INSTALLATION DETAIL FOR VERTICAL JOINTS BETWEEN MODULAR OR PANELIZED WALL UNITS INCLUSIVE OF FACTORY-INSTALLED NICHIIHA AWP.

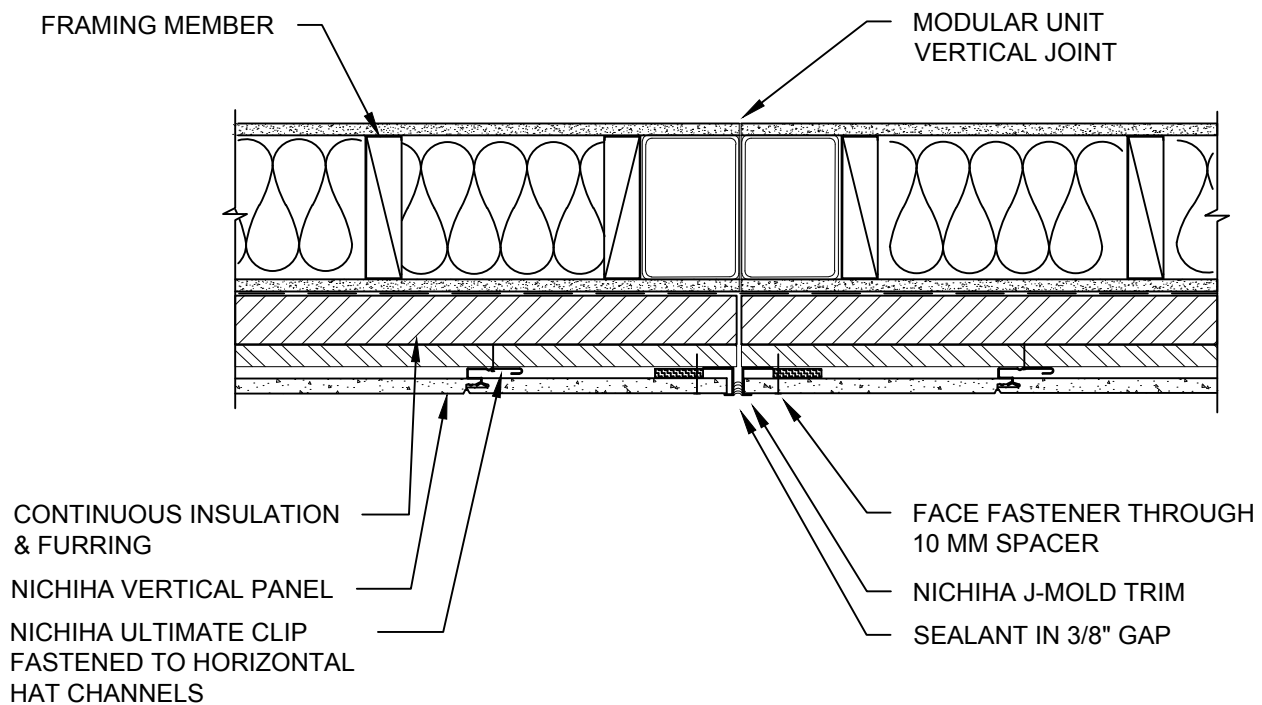

NICHIIHA VERTICAL AWP - MODULAR/PANELIZED - COMPLETE OFFSITE -
VERTICAL UNIT JOINT - J-MOLD

SCALE: 1 1/2" = 1'-0"