


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. ONLY USE 3030MM AWP FOR VERTICAL INSTALLATIONS.
3. FURRING GRID DEPICTED INCLUDES TWO LAYERS: (1) VERTICAL FURRING ALIGNED WITH WALL FRAMING AND (2) HORIZONTAL HAT CHANNELS (MIN. 18 GA) FOR VERTICAL AWP SYSTEM INSTALLATION. REFER TO "CONTINUOUS INSULATION" IN THE VERTICAL AWP INSTALL GUIDE FOR MORE INFORMATION AND ALTERNATIVE ASSEMBLY OPTIONS.
4. FIELD INSTALLATION DETAIL FOR VERTICAL JOINTS BETWEEN MODULAR OR PANELIZED WALL UNITS INCLUSIVE OF FACTORY-INSTALLED NICHHA VERTICAL AWP WITH FIELD-INSTALLED INFILL PANELS OVER UNIT JOINT.

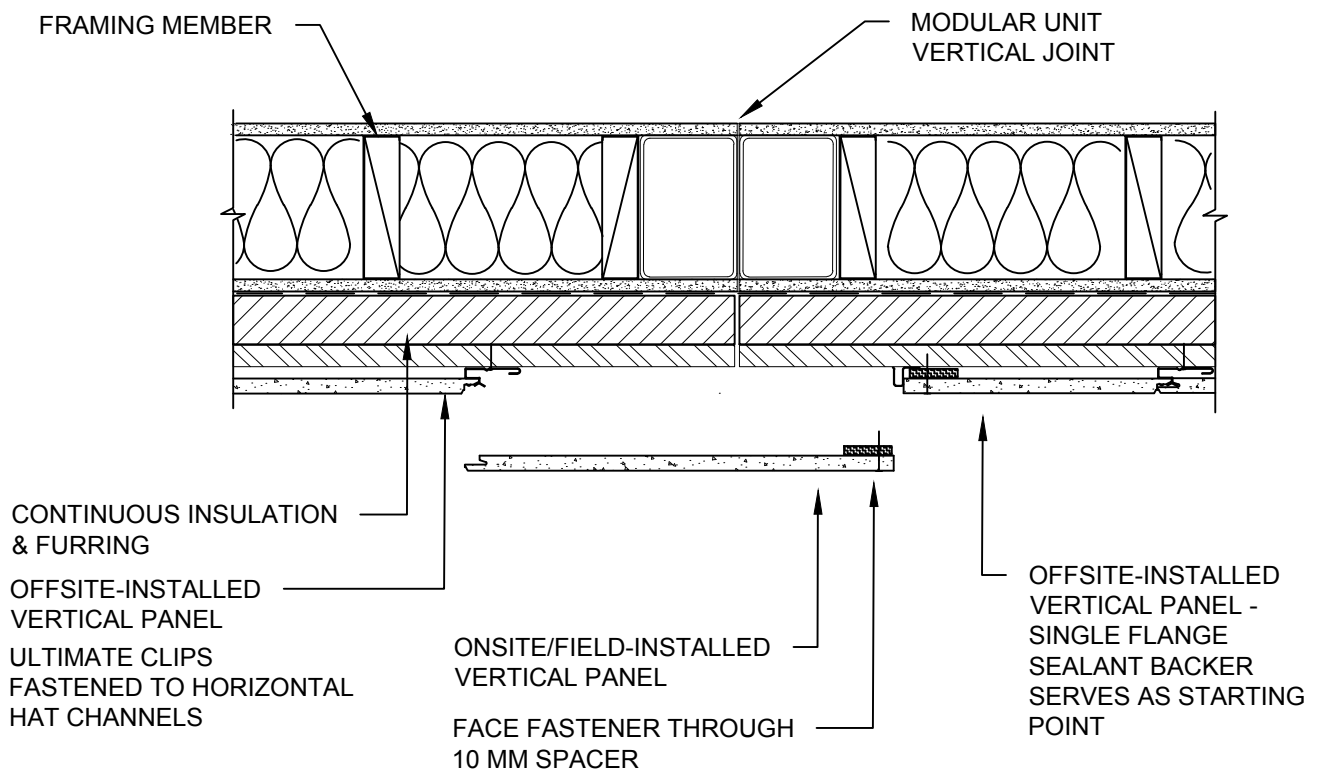

NICHIHA VERTICAL AWP - MODULAR/PANELIZED - C.I./FURRING -
VERTICAL UNIT JOINT - ONSITE COMPLETION

SCALE: 1 1/2" = 1'-0"