


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHIIHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. WOOD STRUCTURAL SHEATHING IS REQUIRED FOR KURASTONE INSTALLATION. SHEATHING REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB (MIN.). IF USING OTHER THICKNESSES ADJUST ACCORDINGLY.
3. A CODE-APPROVED WRB IS REQUIRED. A DARK COLOR IS RECOMMENDED OR PAIR WITH 15 LB BLACK FELT.
4. FASTEN EACH KURASTONE CLIP WITH TWO (2) MIN. $\frac{3}{4}$ " LONG X #8 OR GREATER WOOD SCREWS.
5. CONTACT NICHIIHA TECHNICAL REGARDING CONTINUOUS INSULATION OPTIONS.
6. ON MULTISTORY WOOD STRUCTURES, ADD A $\frac{1}{2}$ " (13MM) HORIZONTAL/COMPRESSION JOINT EVERY TWO FLOORS (20 FEET (6.1m)).

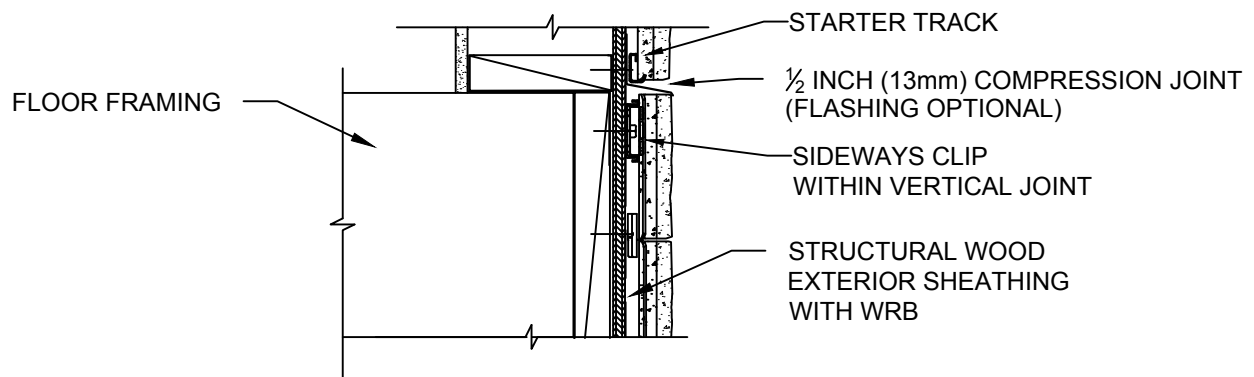

NICHIIHA - KURASTONE - HORIZONTAL/COMPRESSION JOINT

SCALE: 3" = 1'-0"