


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHIIHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. WOOD STRUCTURAL SHEATHING IS REQUIRED FOR KURASTONE INSTALLATION. SHEATHING REPRESENTED HERE IS 1/2" PLYWOOD OR 7/16" OSB (MIN.). IF USING OTHER THICKNESSES ADJUST ACCORDINGLY.
3. A CODE-APPROVED WRB IS REQUIRED. A DARK COLOR IS RECOMMENDED OR PAIR WITH 15 LB BLACK FELT.
4. BUTT KURASTONE PIECE TO WINDOW/DOOR JAMB IN MODERATE CONTACT. APPLY DOUBLE SIDED BUTYL TAPE AROUND OPENINGS OR TRIM PRIOR TO INSTALLING WRB. UTILIZE WATERPROOFING BEST PRACTICES FOR FENESTRATION.
5. FASTEN EACH KURASTONE CLIP WITH TWO (2) MIN. $\frac{3}{4}$ " LONG X #8 OR GREATER WOOD SCREWS.
6. CONTACT NICHIIHA TECHNICAL REGARDING CONTINUOUS INSULATION OPTIONS.

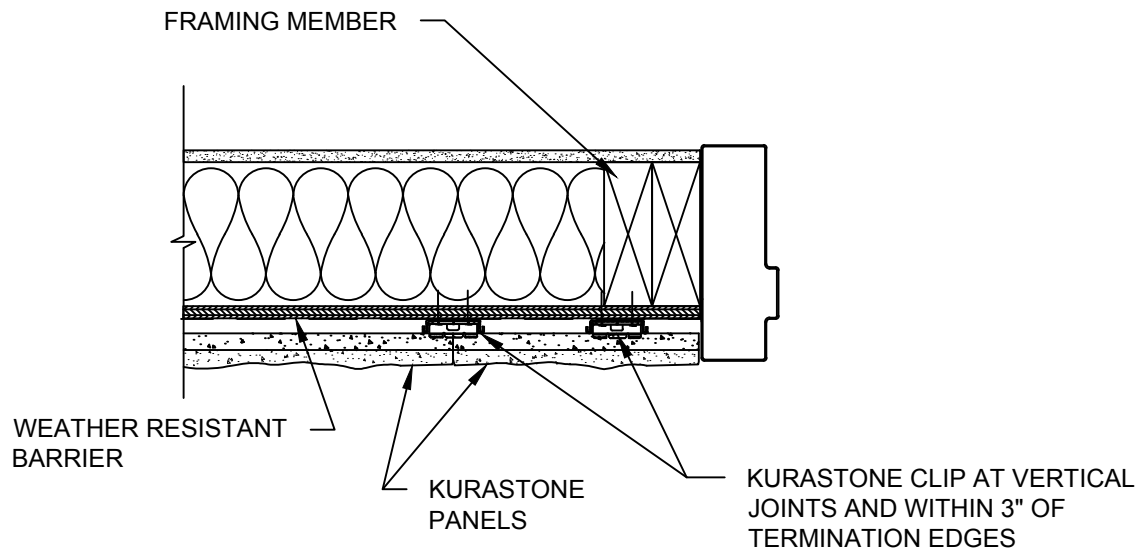

NICHIIHA - KURASTONE - DOOR/WINDOW JAMB

SCALE: 3" = 1'-0"