


NOTES:

1. THIS CONCEPTUAL DETAIL IS A GUIDE FOR INSTALLATION OF NICHHA PRODUCTS. ARCHITECTS/ENGINEERS/CONTRACTORS ARE RESPONSIBLE FOR SUCCESSFUL APPLICATION WHICH DEPENDS UPON SUBSTRATE DESIGN AND CONSTRUCTION BUILT IN ACCORDANCE WITH BEST PRACTICES AND LOCAL BUILDING CODES.
2. NICHHA PANEL REPRESENTED HERE IS 5/8" NICHHA PRODUCT, ADJUST ACCORDINGLY FOR OTHER NICHHA PRODUCT THICKNESSES.
3. $\frac{7}{16}$ " OSB OR $\frac{1}{2}$ " PLYWOOD SHEATHING REQUIRED FOR KURASTONE INSTALLATIONS.
4. DISTANCE BETWEEN EDGE OF PANEL AND KURASTONE SILL CHISELED MUST PROVIDE A MINIMUM OF 1/2" CLEARANCE.
5. METAL FRAMING MEMBERS MUST BE A MINIMUM OF 18 GAUGE.
6. FASTEN EACH KURASTONE CLIP WITH TWO (2) MIN. $\frac{3}{4}$ " LONG X #8 OR GREATER WOOD SCREWS.
7. CONTACT NICHHA TECHNICAL REGARDING CONTINUOUS INSULATION OPTIONS.

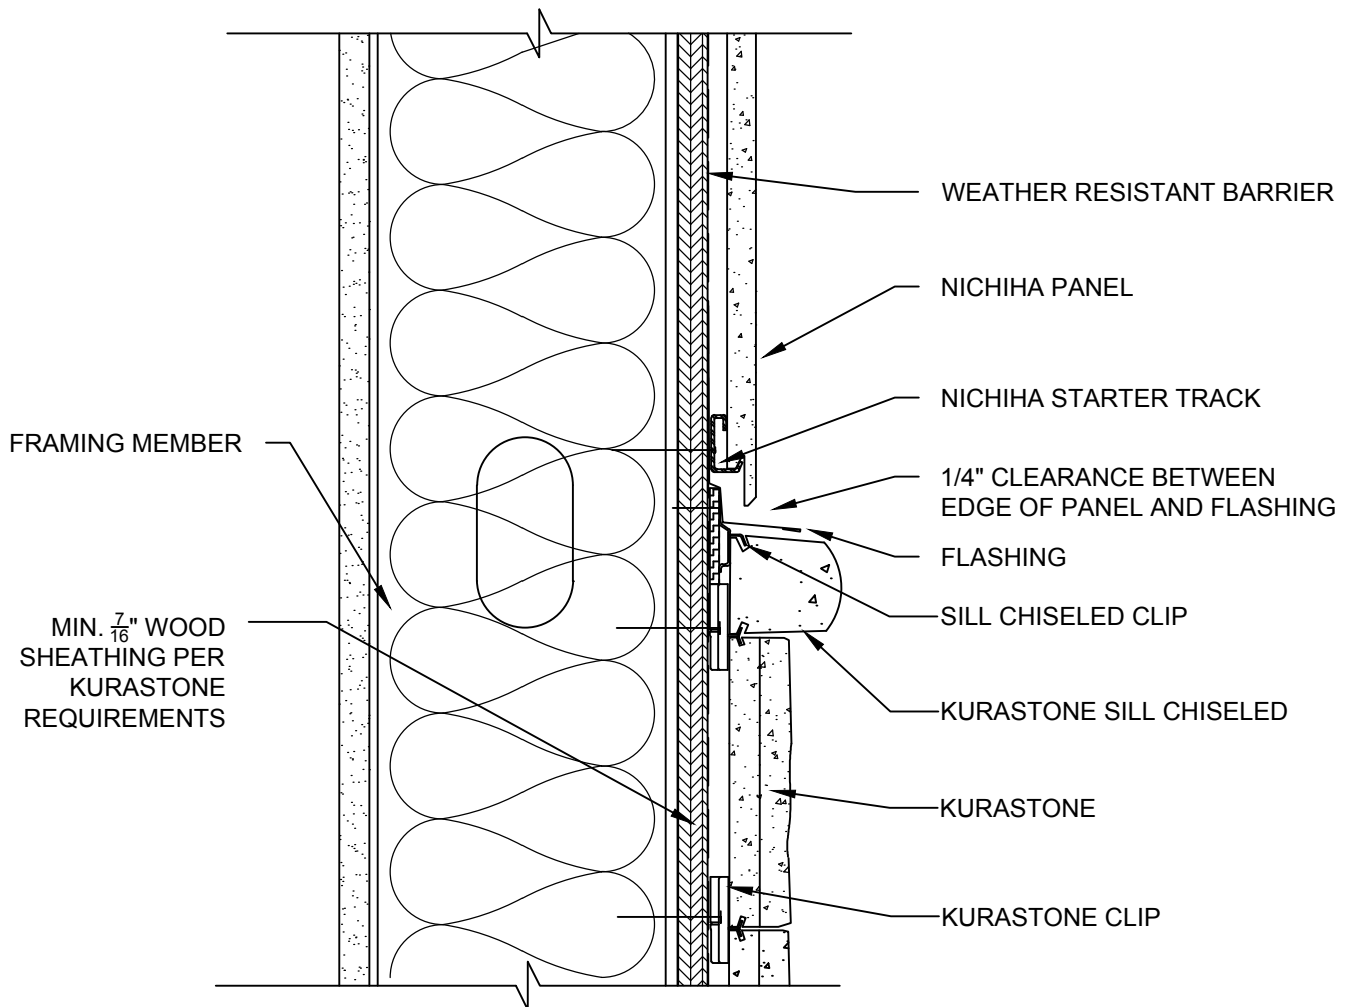

NICHHA - STUD WALL - KURASTONE - SILL CHISELED - HORIZONTAL AWP - TRANSITION DETAIL

SCALE: 3" = 1'-0"